



USE AND OPERATION


- 1 Ensure the load to be elevated is held securely by the chains and fit these through the securing holes in the frame. Check that they are firmly attached.
- 2 By turning the handle, place the support in the center of the frame.
- 3 Then enter the support into the crane or elevation system hook and lift the load gently, ensuring that it remains leveled. If this is not the case, slowly lower the load and find the balance point, moving the roller support with the handle.
- 4 Never try to balance the load while it is suspended.
- 5 Never keep a load elevated on the leveler longer than necessary to position it in the desired place.
- 6 Lower the load softly and make sure it is on a firm, regular and horizontal surface where it will not slide around.
- 7 Remove the leveler from the crane or elevation device.

MAINTENANCE

- 1 Keep the leveler clean and regularly lubricate all moving parts.
- 2 Before each use, carry out a visual inspection and rectify any deficiency found before putting into operation.

K 21228

www.kamasatools.com

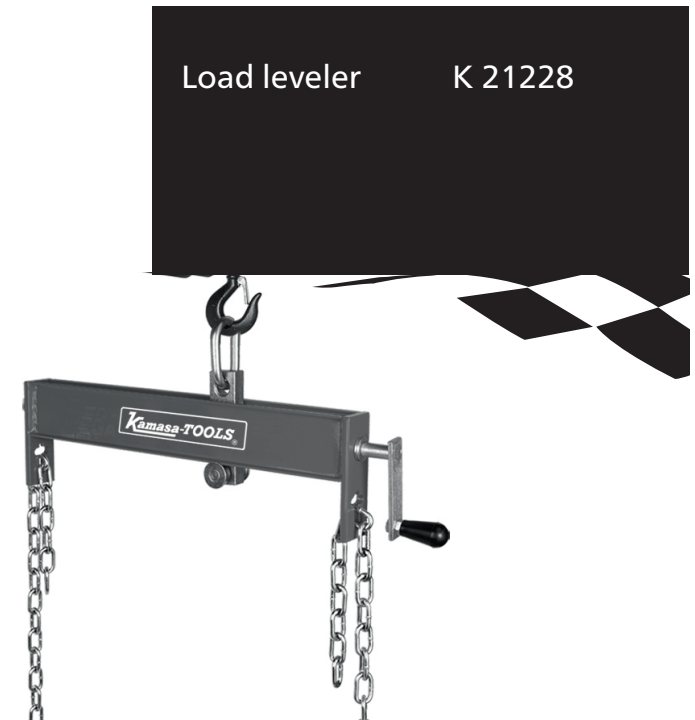

INSTRUCTIONS FOR USE

IMPORTANT

Read these safety instructions carefully in addition to the instructions for use, operation and maintenance and keep them for further reference.

This device should only be operated by authorized persons after having read and understood the contents of this manual in addition to knowing and being authorized to use the elevation systems it is connected to.

The leveler has been designed for leveled elevation of loads and it is used by assembling or fitting it to a crane or other elevation device, it shall not be used for any other type of work. Handle the leveler as well as the crane or elevation device it is fitted to, correctly and ensure that everything is in good condition prior to its use.

Do not modify the leveler or the equipment it is fitted to in any way.

Non-compliance with these instructions may result in injury or harm to the user, the leveler, the load or the elevation elements.

The manufacturer will accept no responsibility for misuse.

SAFETY INSTRUCTIONS

- 1 The load to be lifted shall never exceed the nominal limit of the leveler (500 kg) or the system it is fitted to, including the weight of the leveler.
- 2 The work area should be well illuminated, clear of unnecessary objects and unauthorized people, especially children, should be kept at a distance. No part of the body shall remain under the load and necessary measures should be taken to avoid sliding or unwanted movement of load during operations.
- 3 Ensure that the chains to be used are in perfect state and are adequate for the weight to be elevated or handled.
- 4 Place the load under the approximate center of the frame.
- 5 If it is necessary to move the load with the crane, this must be done on a firm, regular and horizontal surface that is obstacle-free and well illuminated. The elevation height should be as close to the ground as possible.
- 6 If the leveler has suffered any damage, do not use it again until this has been repaired.